


Important: the below spare parts and instructions relate to the bottom clips. If you require the top clips, please kindly contact us directly.

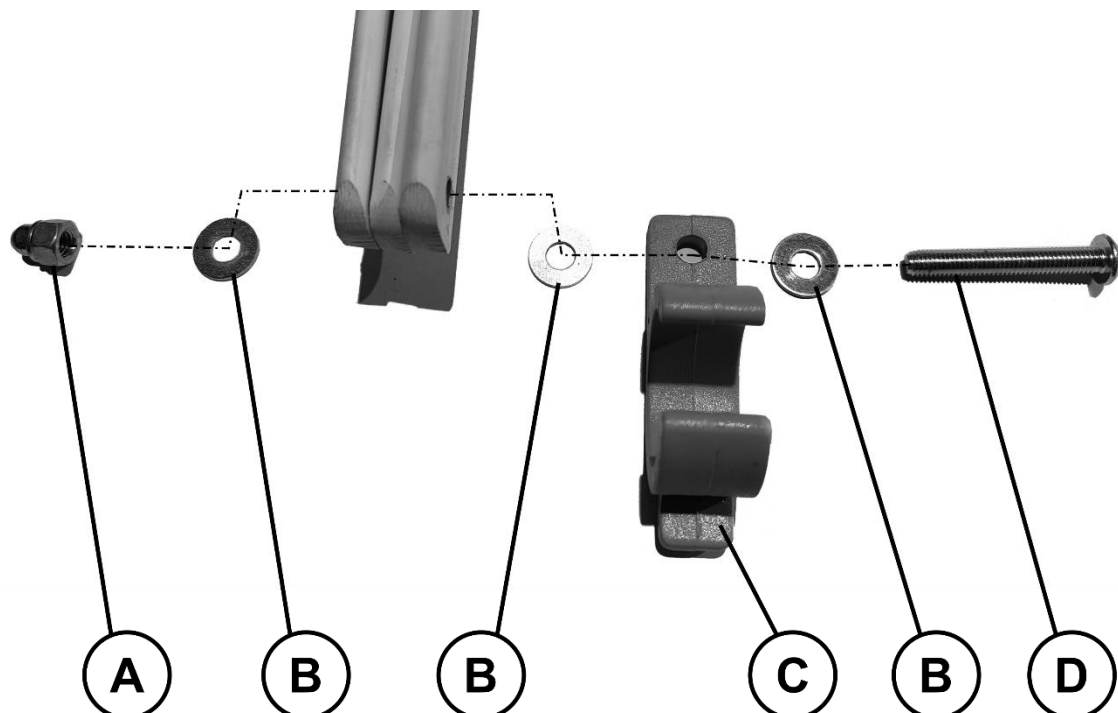

Item Number	Part Number	Description	Qty.
A	N986B05Z	M5 Nylock Dome Nut	1
B	WAMC05Z	M5 Form C Washer	3
C	SN6511	25mm P Clip	1
D	SKTMB05X35Z	M5 x 35mm Socket Button Bolt Zinc	1

How to assemble P Clip to frame:



- Slide parts together as shown in exploded view above.
- Tighten the nut and bolt using an 8mm spanner and 3mm hexagon key.
- Screw the bolt into the nut until the bolt stops against the cap. Do not tighten further – the P Clip should be free to pivot.

Subject to technical alterations